

# Operating Instructions for E-touch App Control



## Downloading the E-touch App

The E-touch app can be used with both smart phone and tablet devices **(OS and/or Android)**.


Utilizing the E-touch app will allow complete controllability of your Electric Modern product.

To download the E-touch app please follow the steps below.

- 1) Access either the Apple App store or Google Play on your device; this is dependent on the operating system of your smart phone or tablet.
- 2) Search, locate and download the App entitled '**e-touch**' (look for the orange logo above).

**Note: When using a tablet filter your search to include smartphone apps.**

(Please Note: The screen shots used in this manual are taken from OS operating system there will be some slight variations for Android operating systems).

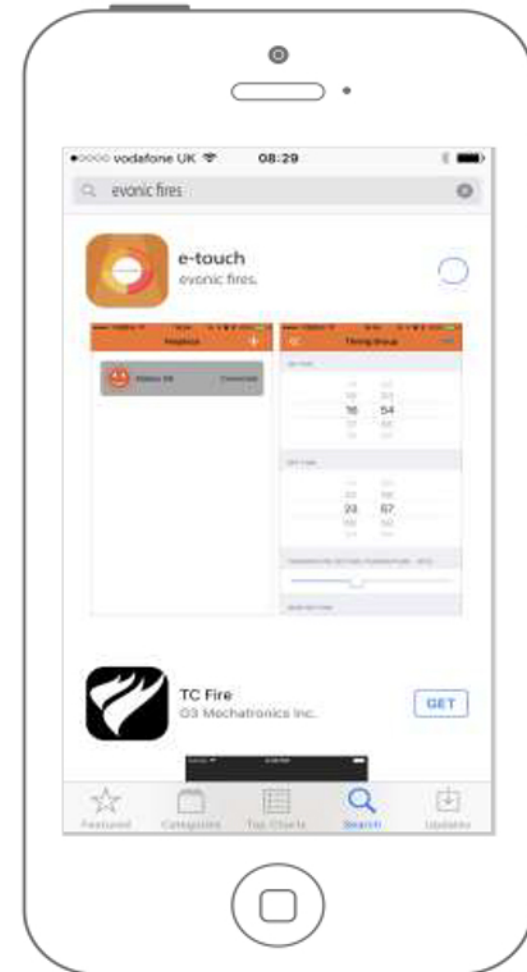

## Pairing your Fireplace to your Device



**Note:** Fireplace pairs to your device via Bluetooth. Ensure that your Bluetooth setting is activated on your device before attempting to pair.

**Only one device can be paired to the fireplace at any given time.**

3) Ensure that the fireplace unit is switched to the 'ON' position.

4) Open the (E-touch) App and the above screen will appear.

5) To ADD your Electric Modern product, simply click the **+** button at the top right of the screen.


## Pairing your Fireplace to your Device Continued:

The E-touch App will then begin to scan for your Electric Modern fireplace.



(Please note: To enable the E-touch app to find/discover your Electric Modern fireplace, the smart phone or tablet must be no more than 3 feet away from the product).


## Pairing your Fireplace to your Device Continued:

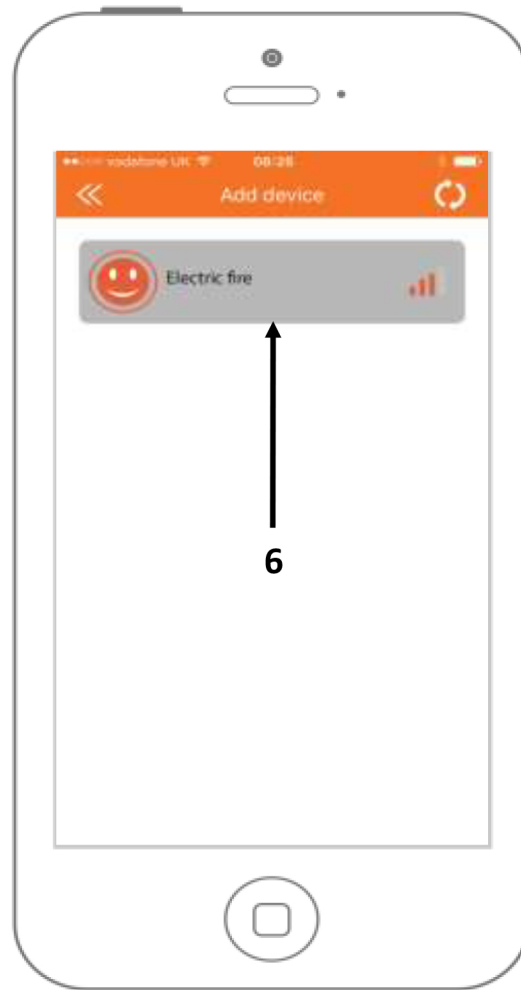

5) Once the E-touch App has discovered your Electric Modern product, the above screen will appear.

6) To connect to your Electric Modern fireplace simply click on the Electric fire icon.

**Your electric fireplace is now paired and ready to operate.**

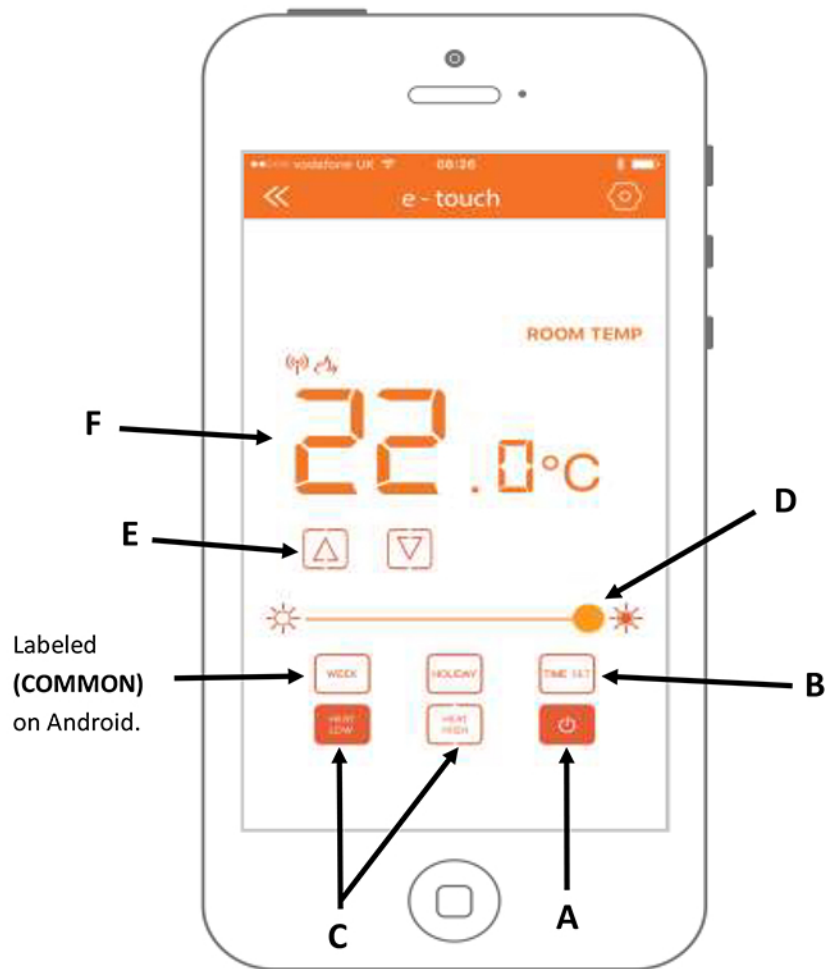

*Home Screen*

A). **On & Off Button** - Single press to turn product on and off.

B). **Setup / Seven-day Programmable Timer Button** - Used to navigate timer options.

C). **Heat High / Heat Low Buttons** - Single press to select 1 or 2Kw of heat output.

D). **Dimmer Slide** - Increase or decrease the brightness of flame effect.

E). **Temperature Control Keys** - Single press to increase or decrease temperature when setting desired room temperature. **(Please note: to activate the heater the temperature must be set higher than the ambient room temperature to de-activate the heater the temperature must be set lower than the ambient room temperature).**

F). **Room Temperature Display** - This displays the desired room temperature.


## Programming the Seven-Day Timer



To access and program the seven-day programmable timer please follow the steps below:

- 1). Click the **(TIME SET)** button on the home screen. The options above image will appear.
- 2). Click the **(WEEK MODE—OS)** or **(COMMON—Android)** button and the timer summary screen will appear.  
(see next page).

## Programming the Seven-Day Timer Continued:

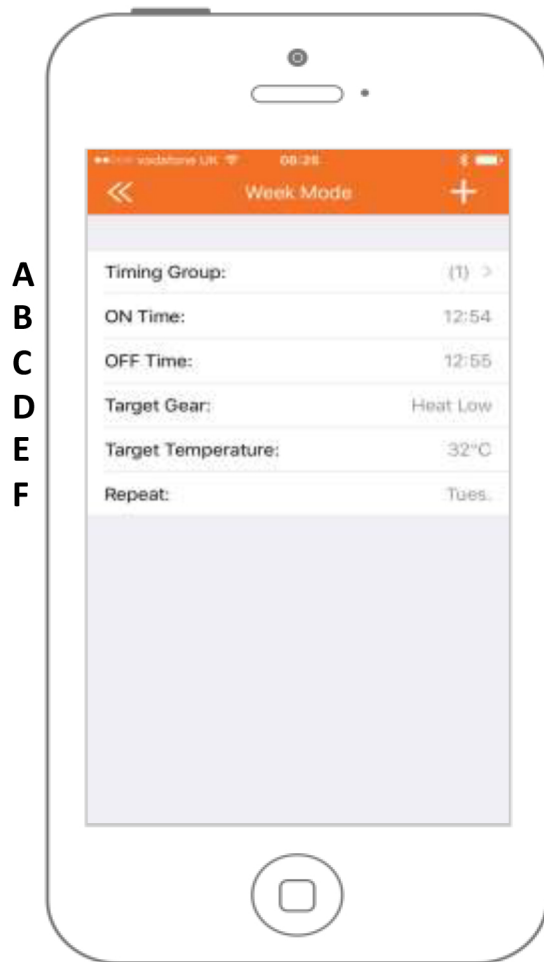

- A). **Timer Group** - Add one or more timing groups or (weeks).
- B). **On Time** - Set a time for the heater to switch (On).
- C). **Off Time** - Set a time for the heater to switch (Off).
- D). **Target Gear** - Set the heater to switch on Heat Low or Heat High.
- E). **Target Temperature** - Set your desired room temperature. The heater will deactivate once the interior thermostat has reached this target temperature.
- F). **Repeat** - Select what day(s) you would like the program to repeat.




## Programming the Seven-Day Timer Continued:



To set a timing program (**ON TIME / OFF TIME**) please follow the steps below:

1. Select the time on which you would like the heater to activate (**ON TIME**).
2. Select the time on which you would like the heater to de-activate (**OFF TIME**).
3. Select your desired room temperature.

## Programming the Seven-Day Timer Continued:

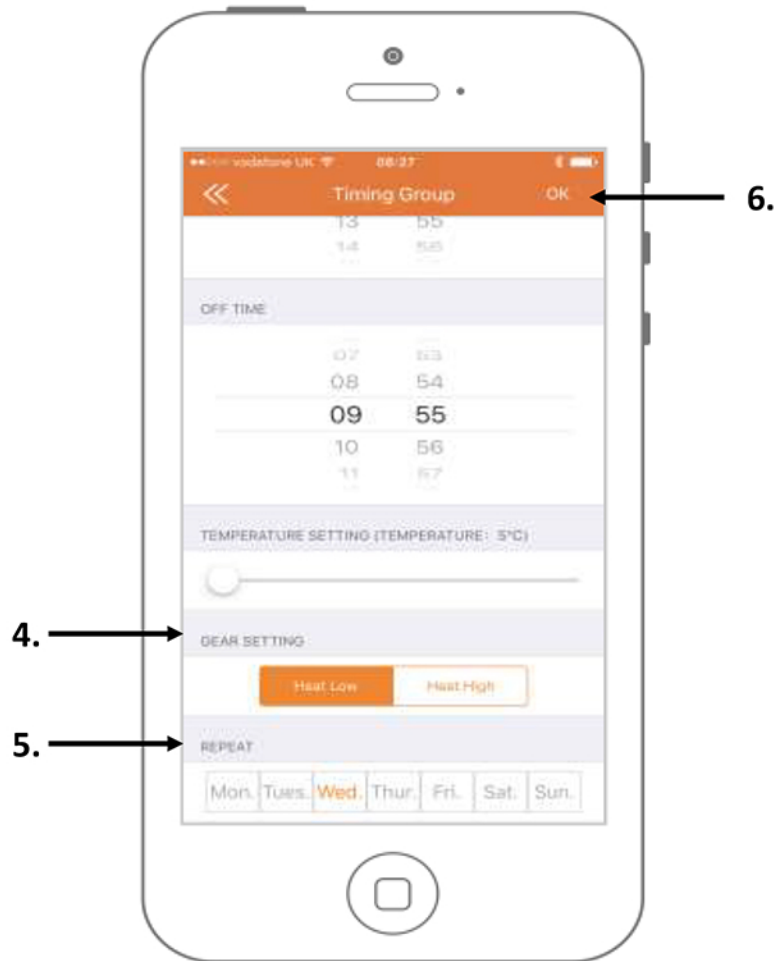

## Troubleshooting:

1. **E-touch app will not connect to product:** Ensure that the rocker/power switch is in the on position on your product and re-scan for the product using the app.

Ensure that the smart phone or tablet is within range of the product (3 feet).

2. **Seven-day timer program will not activate:** Ensure that the **(Week)** button is highlighted on the home screen and the time settings are set correctly (see pages: 7-10).

4. Select the gear setting or power on which power you would like the heater to activate on (Heat Low—1Kw) or (Heat High—2Kw).
5. Select on which day or days you would like your timing program to active or repeat.
6. To confirm your timing program Click (OK).
7. Ensure that the **(WEEK)** button is highlighted on the Home screen to active your timing program.

Once your have activated your timing program, this can be bypassed by pressing the **(HOLIDAY)** button on the home screen.



[www.europeanhome.com](http://www.europeanhome.com)  
30 Log Bridge Road, Building 300, Suite 303  
Middleton, MA 01949