

 
 
H SERIES OPTIONAL FIREPLACE SCREENS





Included	# for Single-Sided	# for Corner Style	# for 3-Sided	# for See-Through	# for Peninsula
Slip Tab (Figure 2)	6	10	14	12	16
Magnet (Figure 3)	6	10	14	12	16
Bent Tab (Figure 1)	3	5	7	6	8
Positioning of Magnets	3 on Front Top 3 on Front Bottom 3 on Top (optional)	3 on Front Top 3 on Front Bottom 2 on Side Top 2 on Side Bottom 5 on Top (optional)	3 on Front Top 3 on Front Bottom 2 on Top each Side 2 on Bottom each Side 7 on Top (optional)	3 on Top each Side 3 on Bottom each Side 6 on Top (optional)	3 on Top each Side 3 on Bottom each Side 2 on End Top 2 on End Bottom 8 on Top (optional)

How to install

- 1) Refer to table above for number of tabs and magnets used for each model. Slip tabs (Figure 2) between the front hearth panel and the inside frame of the front of the fireplace unit (Figure 4). These should be spaced 6" to 12" from the left and right sides, depending on the model, and ones at the each end of the fireplace. A single magnet (Figure 3) is to be placed on the exposed end of the metal tab.

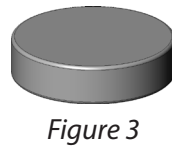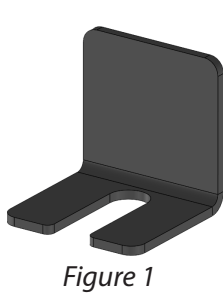

- 2) Slip tabs (Figure 2) will slide between the ceiling panel and the upper inside frame of the fireplace (Figure 5). These should be spaced 6" to 12" from the left and right sides, depending on the model, and ones at each end of the fireplace. A single magnet (Figure 3) will be attached to the exposed metal. The optional bent tabs (Figure 1) can be used in place of the upper slip tabs. Screw in place so the front of the tab is parallel to the front of the ceiling panel.

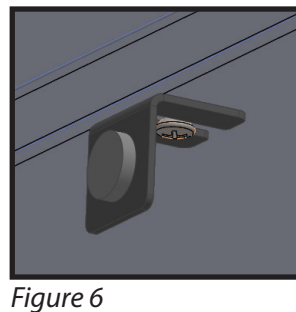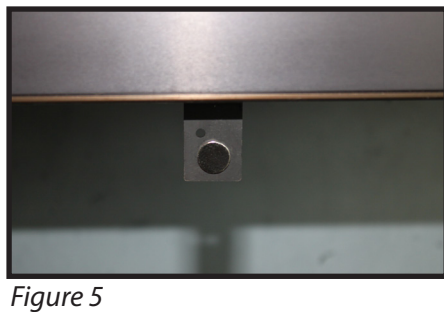

- 3) The bottom of the screen will sit on the fireplace return and go up against the tabs and the magnets (Figure 5). Push the top of the screen into place so that the top of the metal screen frame attaches to the ceiling magnets.

