

Installing the Screens Installation Guide

Model:
95

SCREEN INSTALLATION



3x Tabs
6x Magnets
1x Long Screen
1x Short Screen

(magnet quantity and tab size may vary, follow the same steps)

Note

For **BIDORE / TRISORE** the number of "Short Screens" will vary. Please follow the installation process shown at the end of this manual.



(Long Screen)
37-3/16" W x 16-3/8" H



(Short Screen)
10-1/4" W x 16-3/8" H

SCREEN INSTALLATION



Take one tab and place (2) magnets on each end, pictured on the left. Once magnets are on, place tab under the frame/flange, about 4" away from the top left viewable corner (see photo below).



Once installed on the top left viewable corner, the tab installed should look like the photo above. One magnet will be holding the tab in place (not visible) and the other magnet will hold the screen to the front of the unit.


SCREEN INSTALLATION



Please install the tab on the opposite top corner, in this case, the top right viewable opening. After installed, the tab should look like the photo on the left.

Once the (2) top tabs are installed correctly, place the long screen's (2) bottom tabs in the gap between the bottom trim and the flange. They should fall into place without any effort or resistance.

Tilt the screen towards the top (2) tabs as shown below, magnets will catch the screen and hold it into place.

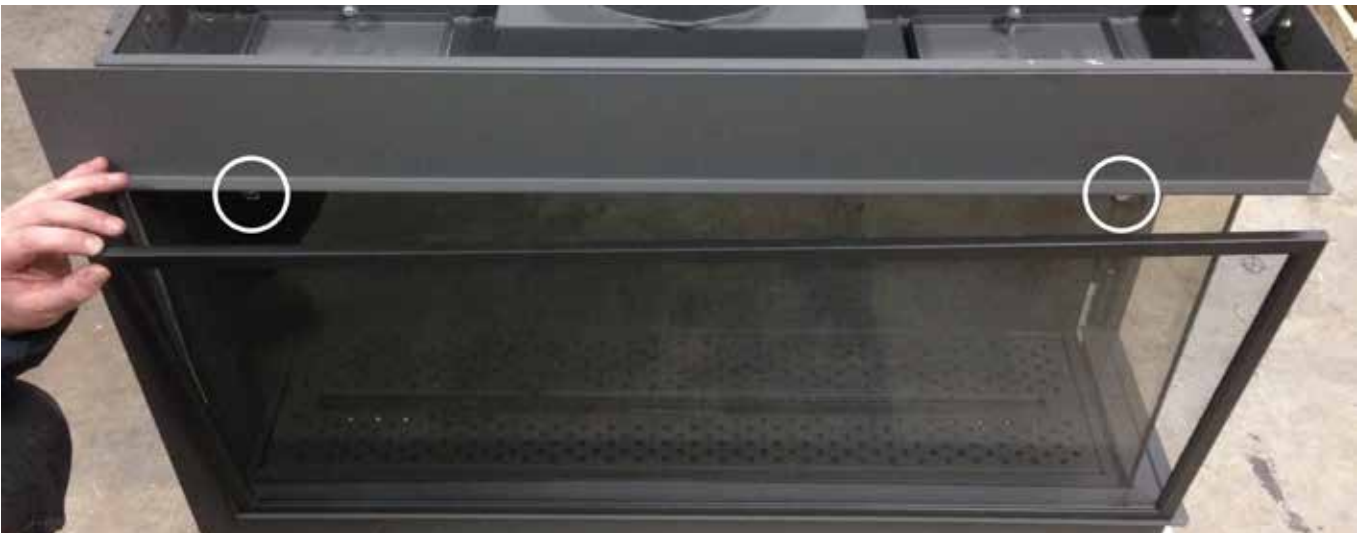

SCREEN INSTALLATION



Here is another view of the (2) top tabs in place before the screen is tilted into position.



This is the final view of the front long screen installed correctly.

SCREEN INSTALLATION

Note

FOR BIDORE / TRISORE PLEASE FOLLOW THE STEPS BELOW TO COMPLETE SCREEN INSTALLATION ON THE SHORT SIDES



The side small screen installation process will be very similar to the front long screen. Keep in mind that there is only (1) tab to be installed on the top, with a magnet holding the tab to the unit and the other magnet visible as shown below.



The tab should look like the photo on the left once installed correctly.

SCREEN INSTALLATION



Once the top tab is installed, place the bottom of the side short screen into place, with the bottom tab of the screen placed between the trim and the flange.

Tilt the screen towards the top of the unit until the tab catches the screen and holds it into place, circled in the photo on the left.



Once installed properly the screen should look like the photo to the left.


If needed, slide the screen gently left or right until the edges of the screen touch.

SCREEN INSTALLATION



This is the final look of a screen installed correctly.

SCREEN INSTALLATION

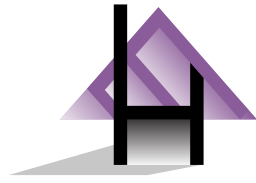

EuropeanHome

EUROPEAN HOME

a division of Europa Ja, Inc.

376 Washington Street

Suite 203

Malden, MA 02148

www.europeanhome.com