

# ***FULCRUM***

## Designer Surround Installation Guide

Exclusively designed to fit these  
European Home H Series Fireplaces:

H-42-1  
H-42-ST

H-60-1  
H-60-ST

H-72-1  
H-72-ST

## TABLE OF CONTENTS

Important Information	3
Specifications and Dimensions	4
Pre-installation Planning	6
Maintenance	7
Warranty	8

## IMPORTANT INFORMATION

### PRODUCT INSTALLATION RECORD

*Installer:* Please complete this form.

*Customer:* Please retain this information.


Purchased From	
Date of Purchase	
Installed By	
Date of Installation	
Surround Serial Number	

Thank you for your purchase of a **Designer Surround for H Series!**


Your **Designer Surround for H Series** is a proprietary combination of modern non-combustible materials designed to please the eye and delight the senses.

Since your **Designer Surround for H Series** is designed to install, and perform, like ceramic tile, it should be installed by a professional mason or tilesetter.

# SPECIFICATIONS and DIMENSIONS

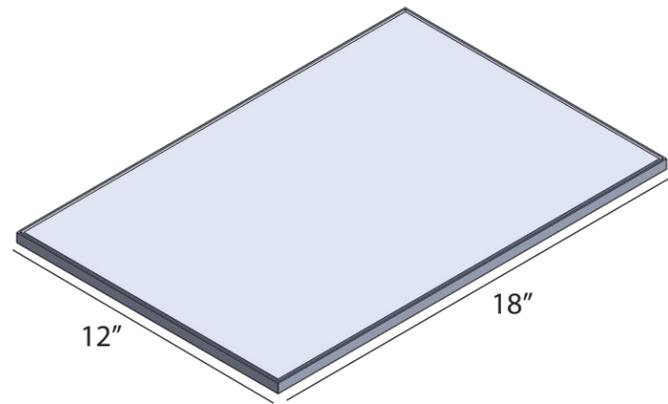

Fulcrum Tile Panel

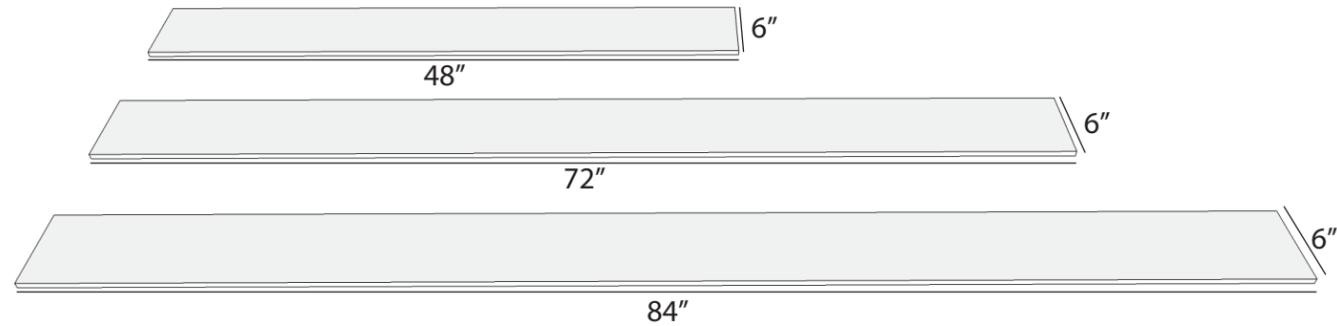


Fulcrum Metal Panels


	48" Panel	72" Panel	84" Panel	Tile Panel
42" Fulcrum	-	-	2	2
60" Fulcrum	4	-	-	2
72" Fulcrum	2	2	-	2

Each surround contains Metal and Tile Panels according to the chart, above.  
All surround panels are 7/16" thick


# SPECIFICATIONS and DIMENSIONS

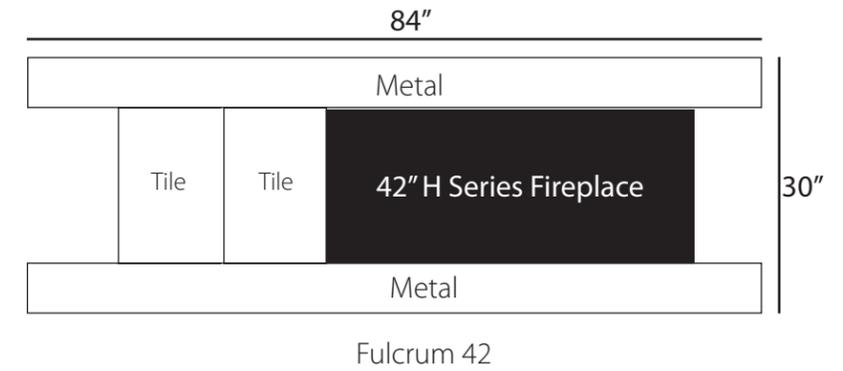

Fulcrum 42

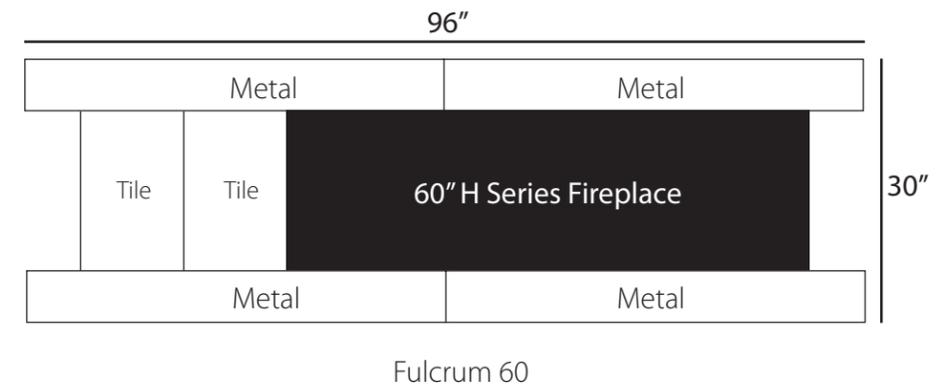

Fulcrum 60

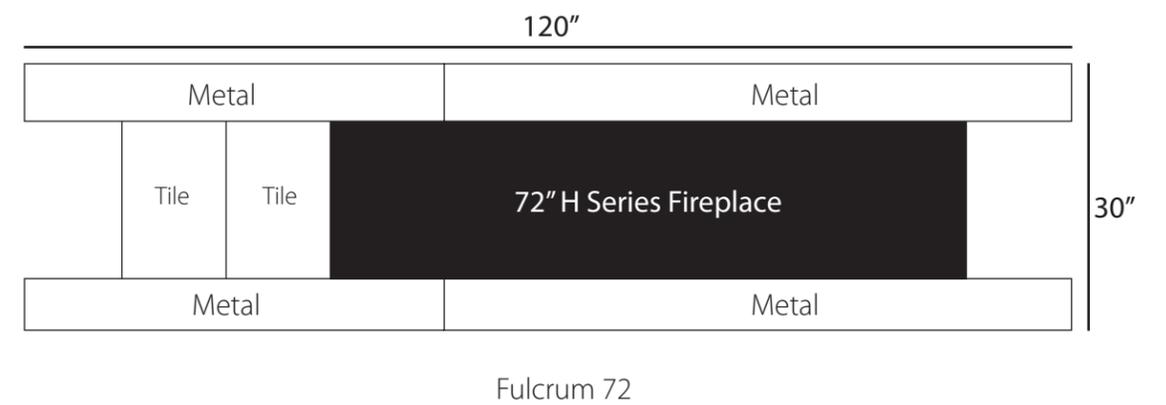

Fulcrum 72

# PRE-INSTALLATION PLANNING

## BEFORE YOU BEGIN

Thank you for your purchase of a **Designer Surround for H Series**! This surround has been designed to provide you with safe, trouble-free installation.

Since these surrounds are intended to be installed in the same manner as standard wall tiles, the wall(s) supporting the surround should be built with HardieBacker® brand cement board by James Hardie Building Products.

Please read these instructions thoroughly before proceeding. There is information which is important for safe and effective installation.

Please inspect your shipment for completeness and any damage. Contact your retailer if any damage is found. Do not install your surround with any damaged or substituted parts.

For the best finished results, please consider hiring a professional mason or tilesetter to install these surround panels.

Before you begin your installation you should have the following tools and supplies:

- Gloves
- Pencil
- Thinset mortar (enough for at least 15 square feet of coverage)
- Notched Trowel
- Sponge
- Level
- Tape Measure and Framing Square
- Lint-free Cloth


**Make sure the wall and surround panels are clean and ready to receive thinset mortar.**

# INSTALLATION

## LAYING OUT THE PANELS


The panels of the **Designer Surround for H Series** are made to fit against the fireplace opening and each other.

First, hold a metal panel up to the lower edge of the fireplace and mark the wall with a light pencil line along the lower edge of the metal panel(s). Then draw a straight line parallel to the right edge of the fireplace opening at the distance shown below as appropriate for your surround model. The intersection of these two lines is the starting point for the installation.

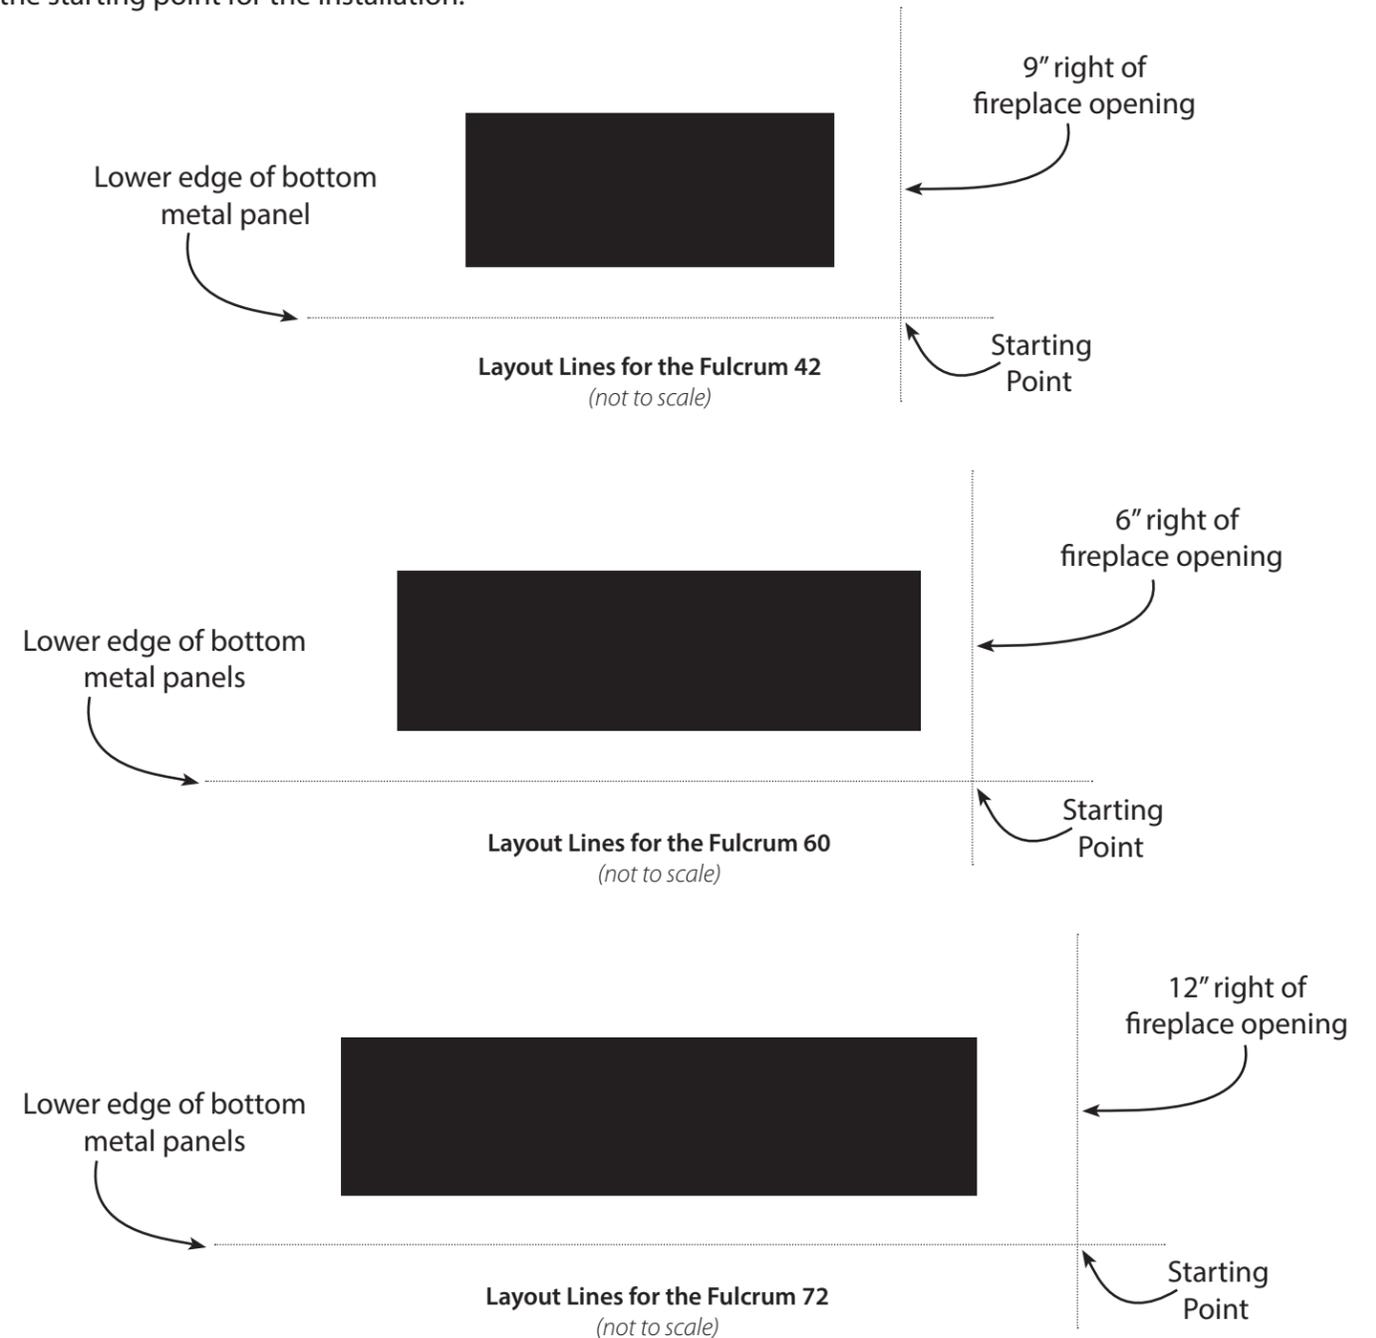

# INSTALLATION

Using the starting point and the edges of the fireplace, mark lines on the wall using the measurements appropriate to your model, below.

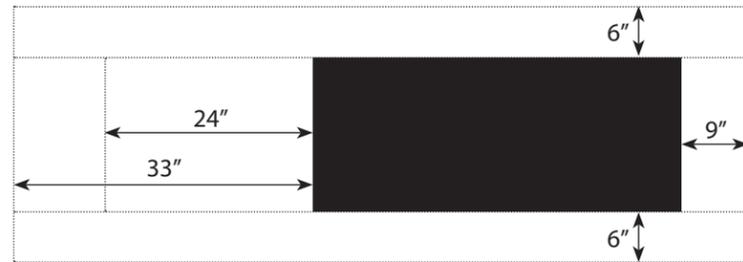

**Layout Lines for the Fulcrum 42**  
*(not to scale)*




**Layout Lines for the Fulcrum 60**  
*(not to scale)*




**Layout Lines for the Fulcrum 72**  
*(not to scale)*

# INSTALLATION


The areas in gray, below, show where the thinset is to be applied to the wall.

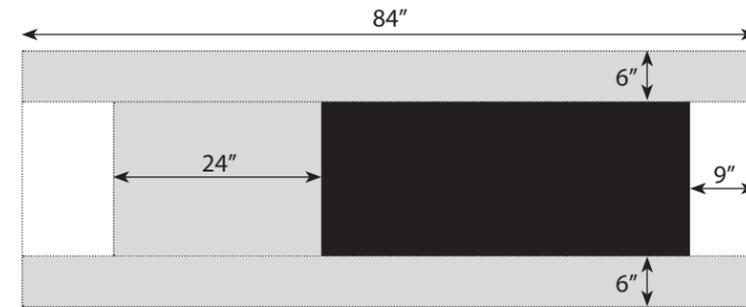

**Thinset Area for the Fulcrum 42**  
*(not to scale)*

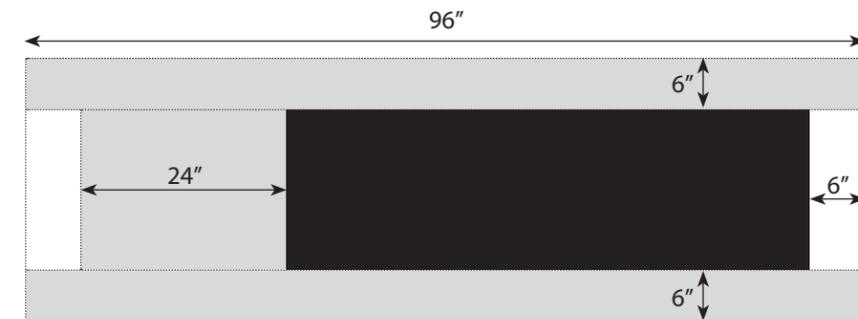


**Thinset Area for the Fulcrum 60**  
*(not to scale)*

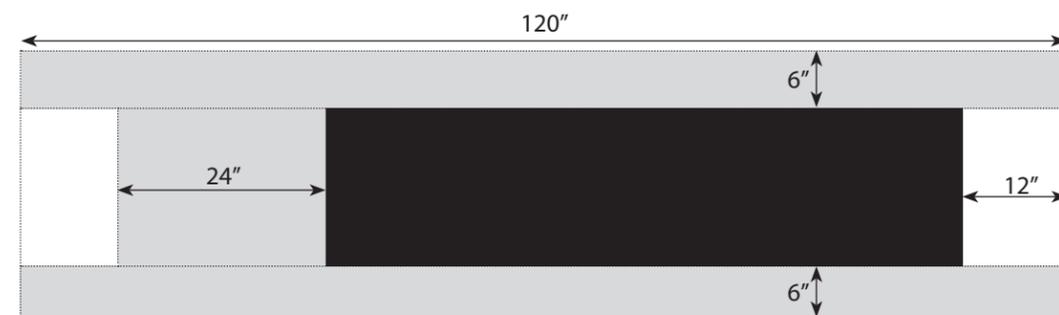


**Thinset Area for the Fulcrum 72**  
*(not to scale)*

# INSTALLATION


The metal panels and tile panels should be applied to the wall in the order shown below.

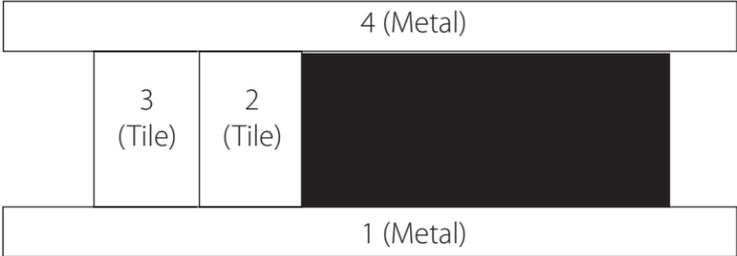

Fulcrum 42

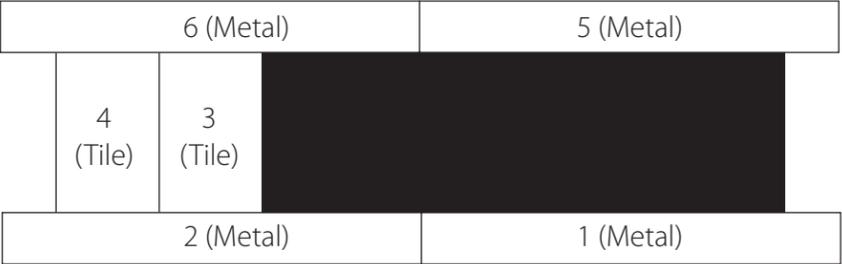

Fulcrum 60

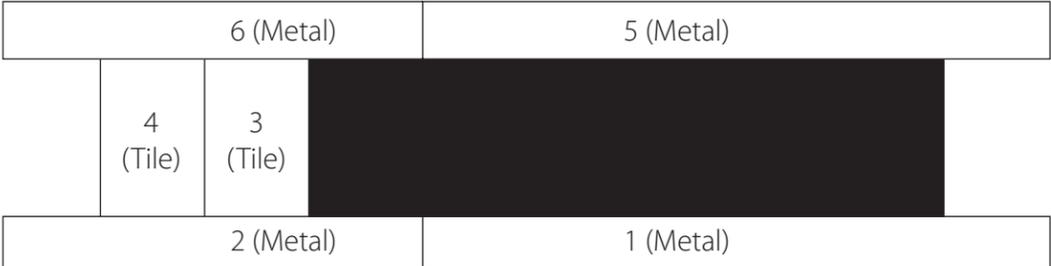

Fulcrum 72

# MAINTENANCE

## SURROUND MAINTENANCE

### Weekly Cleaning

Both the metal and tile panels should be wiped with a lint free cloth to remove any dust then wiped with a damp cloth.

### Yearly Cleaning

Both the metal and tile panels should be wiped with a lint free cloth to remove any dust then wiped with a damp cloth.

# WARRANTY

## European Home Warranty

### Designer Surround for H Series

European Home warrants this product against defects in materials and workmanship for a period of TWO (2) YEAR from the date of original retail purchase.

If a defect exists, European Home will, at its option, either (1) provide needed components using new or refurbished replacement parts or (2) exchange the product with one which is new or which has been manufactured from new or serviceable used parts and is at least functionally equivalent to the original product. A replacement product/part assumes the remaining warranty of the original product or ninety (90) days from the date of replacement or repair, whichever provides longer coverage for you. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes the property of European Home. All warranty claims must be submitted through the dealer from which you purchased the product. Check with your dealer in advance for any costs to you when arranging a warranty call. Shipping and/or delivery charges for parts are not covered by this warranty.

Nothing in the above shall be deemed to imply that this warranty shall apply to work which has been abused or neglected or shows evidence of changes or modifications by others with or without permit, damages caused by the acts of God, building settlement or moving, fire or vandalism. In addition, installation of this product that varies from the requirements stated in the instruction manual will void the warranty.



**EUROPEAN HOME**  
a division of Europa Ja, Inc.  
30 Log Bridge Road  
Building 300 - Suite 303  
Middleton, MA 01949  
[www.europeanhome.com](http://www.europeanhome.com)